

# Step-by-step plan / commissioning instruction

## Strakvlak LSR

- 01.** Begin by assembling the control arm on the Strakvlak LSR. Then, connect the control arm plug to the available port on the control box.
- 02.** Start by assembling the pendulum axle side wheels. Place the quick-release with a spring over the side axle.
- 03.** Attach the laser mast on both sides. Pay attention! The marking at the bottom of the mast corresponds to the top of the mast holder of the Strakvlak LSR.
- 04.** Position the laser receivers as follows: attach the left receiver on the left side and the right receiver on the right side, at the 00 position of the laser mast. (The 00 position is located 100 cm above ground level.) From the user's position, ensure that the receivers have their display facing towards the laser.
- 05.** Activate the laser receivers by holding down the "on/off" button. Release the button after you hear a beep.
- 06.** Install the batteries in the battery box. The control box provides information about the status of the batteries.
- 07.** Turn on the Strakvlak LSR by setting the "on/off" switch on the control box to "on." The colors green, white, and red will illuminate. If they turn off, proceed with the next instruction.
- 08.** De witte LED zal gaan branden. Druk vervolgens op de rode knop op het handvat. De machine zal opstarten en de zijwielen worden op de nulpositie geplaatst. Zodra de machine gereed is, zal de witte LED uitgaan en de groene LED zal gaan branden. Vervolg instructie.
- 09.** The white LED will light up. Then, press the red button on the handle. The machine will start, and the side wheels will be placed in the zero position. Once the machine is ready, the white LED will go off, and the green LED will illuminate. Proceed with the next instruction.
- 10.** Position the Strakvlak LSR at the starting position (at the desired height, on a surface of approximately 2 square meters).
- 11.** Place a laser on a tripod, aim it towards the laser receivers of the Strakvlak LSR, and power it on. Adjust the height of the tripod to position the rotating laser line in the Strakvlak LSR receivers so that both of them display approximately "0" on the screen.
- 12.** The Strakvlak LSR is now ready for use. Press the red control button to start.



### Additional

- >** If during the leveling process, more loose material accumulates in front of the Strakvlak LSR, press the red button again. This will switch the machine to manual mode, allowing you to move excess material without using the laser control.
- >** Subsequently, you can begin leveling once again on the previously smoothed surface by pressing the red button.